

INSTRUCTION FOR 5 CHIME MOVEMENTS

(A) To Set The Time And Melody

Remove the battery cover.


Before inserting the batteries, make sure to set the time at around 5:50 (A.M.) by turning the hand-setting knob on the movement.

Insert the batteries according to (+) and (-) marking in the battery compartment. (When the batteries are inserted, melody function is automatically set for 5:00 A.M. regardless of the time indicated on your clock.)

To set the time and melody, please make sure to turn the hand CLOCKWISE. If present time is P.M., make sure hour hand passes through 12 o'clock until the desired time is shown. During setting time, you keep hearing sounds, but keep continuing until the desired time is shown. Once the desired time is set, melody starts sounding correctly.

The 4x4 mode will not work correctly during the first hour after time is set. However, after that, it works perfectly. This is normal condition for this movement.

(B) Melody Function

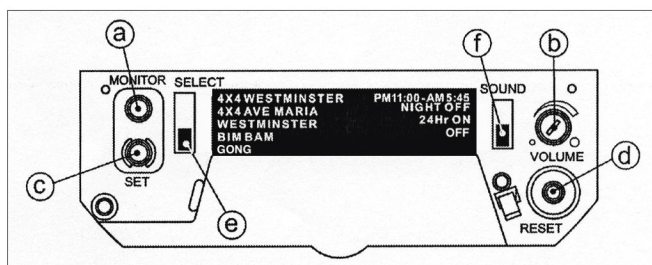

MONITOR

To demonstrate the hourly sound, select the melody by e) button and press the "MONITOR" button.

VOLUME: Rotary volume

<Important>

SET:

RESET:

These are for technical use and please never touch after you insert the batteries.

SELECT: Melody select

4X4 WEST-MINSTER: West-minster + Striking at: 00 min; 1/4, 2/4, 3/4 West-minster at 15,30 and 45 min respectively.

4X4 AVE MARIA: Ave Maria + Striking at: 00 min, 1/4, 2/4 & 3/4 Ave Maria at 15, 30 and 45 min respectively.

WEST-MINSTER: West-minster + Striking at 00 min.

BIM BAM: Bim Bam at 00 min (e.g. at 1 o'clock, 1 strike of Bim Bam; at 2 o'clock, 2 strikes of Bim Bam, etc.)

GONG: Hourly strikes follow hourly chime & on the half hour.

SOUND: Sound ON/OFF select

NIGHT OFF: Night shut off mode.

Sound turn-off from 11:00 p.m. to 5:45 a.m. automatically.

24Hr ON: 24 hours, sound turn-on.

OFF: Sound off mode.